



NAME	FUSE NUMBER	SIZE	CIRCUIT	LOADS
HEATED SEATS	M1-N1	40A	742	HEATED SEATS
STOP	M2-N2	30A MAXI FUSE	642	STOP LPS (PICKUP ONLY)
A/C	M3-N3	50A MAXI FUSE	542	HI BLOWER MOTOR RELAY AND REAR BLOWER RELAY (SUBURBAN)
ABS	M4-N4	60A MAXI FUSE	442	ELECTRONIC BRAKE CONTROL MODULE (EBCM)
IGN-B	M5-L5	50A MAXI FUSE	342	IGN-B SWITCH GO TO FUSE BLOCK BUS BARS
IGN-A	M6-N6	40A MAXI FUSE	242	IGN-A SWITCH GO TO FUSE BLOCK BUS BAR
BATTERY	M7-N7	50A MAXI FUSE	142	FUSE BLOCK BUS BAR, BATTERY
LIGHTING	M8-N8	50A MAXI FUSE	42	HDLP & PANEL DIMMER SW, FOG AND CTSY FUSES
A/C COMP	K11-L12	10A FUSE	1240	A/C PRESS SW TO A/C CLUTCH
HORN	H11-J12	20A FUSE	740	HORN RELAY, UNDERHOOD LPS
ECM-B	F11-G12	20A FUSE	440	FUEL PUMP, PCM/VCM,
AUX FAN	J10-H9	30A FUSE	1540	AUX FAN
RR DEFOG	G10-F9	30A FUSE	1440	RR DEFOG
ECM-I	K7-L8	20A FUSE	539	IGN A SWITCH TO ENGINE LOADS, EGR, CANISTER PURGE, EVRV IDLE COAST SOLENOID, HEATED O2 SENSORS, FUEL HEATER, WATER SENSOR, MASS AIRFLOW SENSOR, VCM
ECM I	J8-H7	20A FUSE	439	INJECTORS PCM/VCM, IGN COIL AND MODULE
IGN-E	G8-F7	10A FUSE	639	AUX FAN RELAY COIL, A/C COMP RELAY, FUEL MODULE, DUAL TANK
FUEL SOL	F5-G6	20A FUSE	639, 339	FUEL SOLENOID, DIESEL ENG
GLOW PLUGS	G4-F3	10A FUSE	507/503	GLOW PLUGS
DIODE-I	L2-K1	BRAKE	33-680	ELECTRONIC BRAKE CONTROL MODULE
STUD "A"	R7-P7	30A		AUX A
STUD "B"	R8-P8	30A		CAMPER/TRAILER WRG