



BATTERY A0

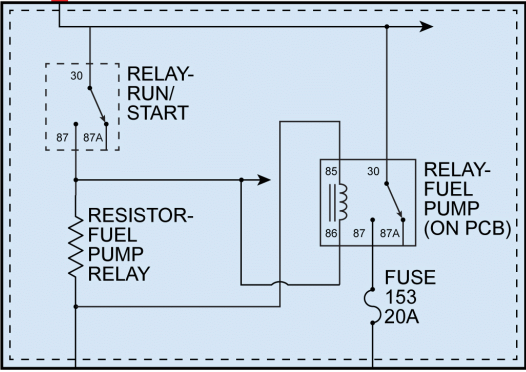

ASSEMBLY-POWER DISTRIBUTION CENTER

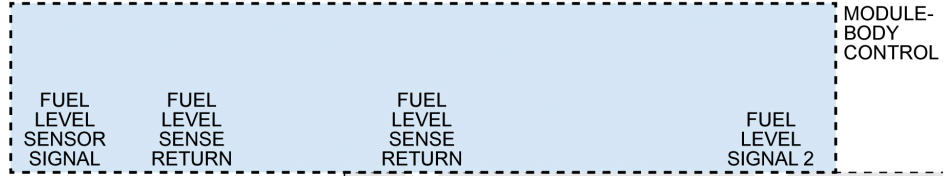

MODULE-BODY CONTROL

26
K31
0.35
BN

5 C3
N1
0.8
DB/OG

17
N4
0.5
DB/WH

16 C5/E
G109
0.5
BK

16
G109
0.5
BK

15 C5/E
N5
0.5
BK/GY

A1
A1
INLINE-BODY/
HEADLAMP
DASH

SG109
G109
0.5
BK

A
A
A

B
B
B
INLINE-BODY/
FUEL
TANK

84 C1
FUEL PUMP CONTROL
MODULE-POWERTRAIN CONTROL

4
FUEL PUMP CONTROL OUTPUT
GROUND

3
FUEL LEVEL SENSOR SIGNAL

2
FUEL LEVEL SENSE RETURN

2
FUEL LEVEL SENSE RETURN
MODULE-FUEL PUMP

2
FUEL LEVEL SENSE RETURN

1
FUEL LEVEL SIGNAL 2
SENSOR-FUEL LEVEL

1
Z913
0.8
BK/RD

SZ913

G913A

AWD